



1. Determine the defective fuse(s) by checking the information displayed on your control panel. If an error is displayed on the screen, the error will specify the Output #, the fuse defective is equivalent to the output number. Alternatively, on the control panel interface you can follow the sequence below, t

